

BIG TEAM RIDE ONS

THE ULTIMATE SPORTS CAR



ASSEMBLY AND OPERATION MANUAL

Please read this entire manual to ensure proper assembly and safe operation of the vehicle.

GB19865 GB6675



EN71 EN62115



ROHS



ASTM-F963



www.partyanimalinc.com

INITIAL USE



NOTE: Before initial use battery must be charged for 18 hours!

*Permanent damage to the battery may occur if battery is not charged for **18 hours** before initial use!*

STEPS:

1. Insert the DC Charger plug into the charger input under the seat inside the vehicle, and then plug the charger into a wall outlet or power socket. Charge for 18 HOURS on initial charge.
2. After the initial charge, normal charging time is 8-12 hours.
3. **NEVER** charge for more than 20 hours at a time.

BATTERY CHARGING AND MAINTENANCE:

- Even when not in use, the vehicle should still be charged at least once a month to ensure the proper life span of the battery.
- Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied battery and charger.
- Use of the rechargeable battery and charger for any other product may result in overheating, fire, or explosion. Never use the supplied rechargeable battery and charger with another product.
- Only an adult should handle or charge the battery. Do not charge the battery near heat or flammable materials, and do not connect to charger if any water is present in the vehicle. It is normal for the battery and charger to be very warm while charging.
- Never open the battery. Batteries contain lead and lead compounds (acids) that are toxic and corrosive, and known to the state of California to cause cancer and reproductive harm.

⚠️WARNING

- This vehicle must be assembled by an adult who has read and understands the instructions in this manual.
- This product contains small parts. Keep children away during assembly. Keep all packaging materials and bags away from children, and be sure to remove all packaging material and parts from underneath the vehicle body. Dispose of all packaging before use.
- For best performance, only use this vehicle on flat and hard surfaces.
- **AGE RANGE:** 3 to 8 years old
- **CAPACITY:** 80 lbs
- Children should always sit in the seat when using this vehicle. Never stand or sit on other areas of this vehicle. Direct adult supervision is **REQUIRED**.
- Never leave a child unattended, and do not operate this vehicle on streets, or near cars, swimming pools, other bodies of water, drop-offs, hills or steep inclines.
- Limbs, hair, and clothing can get caught in moving parts. Always wear shoes, keep limbs away from moving parts, and do not wear loose clothing while operating this vehicle.
- This vehicle does not have brakes or braking capability. Do not leave a child unattended during operation. Do not use this in a location that may require braking capability, as this could result in loss of control, which may cause serious injury or death.
- Use of this vehicle near streets, motor vehicles, steps, bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night, or in the dark could result in an unexpected accident.
- Use of this vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- Do not operate this vehicle in an unsafe manner. Examples include but are not limited to:
 - Pulling the vehicle with another vehicle or similar device
 - Allowing more than one rider
 - Pushing the user
 - Traveling at an unsafe speed.

- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring and circuitry in the charger may cause electric shock. Always keep the charger housing closed.
- Neither vehicle nor remote control should be exposed to rain or used in the water. Do not pour water or other liquids in the vehicle or soak it in water. Wash with a damp cloth. Do not store the vehicle outside where it could be vulnerable to rain or snow.
- Always keep all liquids away from the battery and keep the battery dry. Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical is swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.

⚠️WARNING: Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect or incidental, resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.

SPECIFICATIONS

Item	Big Team Ride On Car
Battery	6V7AH/12V7AH/12V10AH
Motor	Single-drive/Double-drive
Ages	Children 3 - 8
Capacity	80 lbs.
Size	46" x 31" x 20"
Speed	2-4 mph
Remote Control	Uses 2 x AAA Batteries (Not Included)
Charger	DC 6V700MA/DC 6V800MA/DC 12V1000MA
Charging Time	Initial Charge: 18 hours. Normal charge: 8-12 hours.
	DO NOT CHARGE FOR MORE THAN 20 HOURS.


PARTS



No.	Part Name	Qty	No.	Part Name	Qty
1	Car Body	1	10	Right Window	1
2	Front Wheel	2	11	Back Window	1
3	Wheel Cover	4	12	Steering Wheel	1
4	Rear Wheel	2	13	Remote Control	1
5	Driving Motor	2	14	Car Charger	1
6	Rearview Mirror	2	15	Wheel Cotter Pins	4
7	Windshield	1	16	Wheel Bushings	8
8	Seat	1	17	Washers	6
9	Left Window	1	18	Wheel Cover Screws	20


ASSEMBLY

1. Assemble The Back Wheels

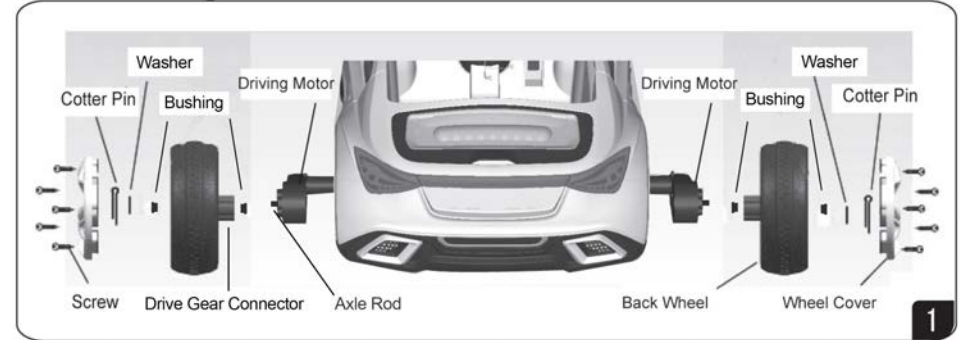

The back wheels are the two wheels that have drive gear connectors attached. Insert wheel bushings on wheels. Connect the wheels to the axle, securing the drive gear to the driving motor so that the axle rod shows through on the outside of the wheel. Next place a washer around the axle rod on the outside of the wheel. Then insert cotter pin through axle rod hole, and bend cotter pin tongs outward around the axle rod so it stays in place. Finally, place the wheel covers on and secure with five screws.

2. Assemble The Front Wheels

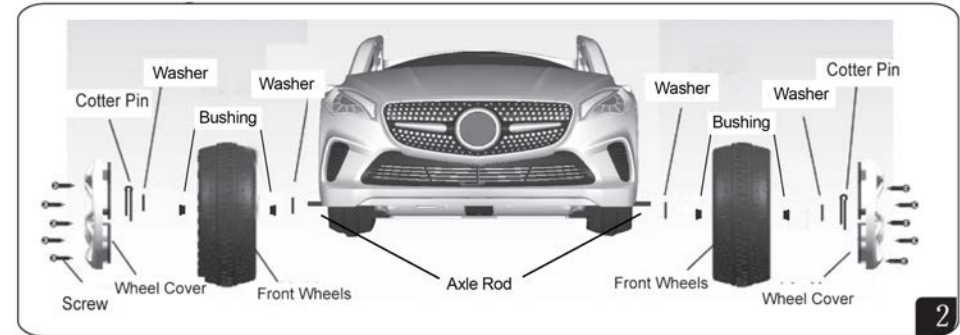


First, insert wheel bushings on wheels and place one washer on each end of the front axle. Then place the front wheels on the axle. Next, place one more washer on the outside of each wheel. Insert cotter pin through axle rod hole, and bend cotter pin tongs outward around the axle rod so it stays in place. Finally, place the wheel covers on and secure with five screws.

3. Install The Front Windshield



Snap the windshield into place by inserting the latches on the bottom ends of the windshield into the grooves on the car.

4. Install The Steering Wheel

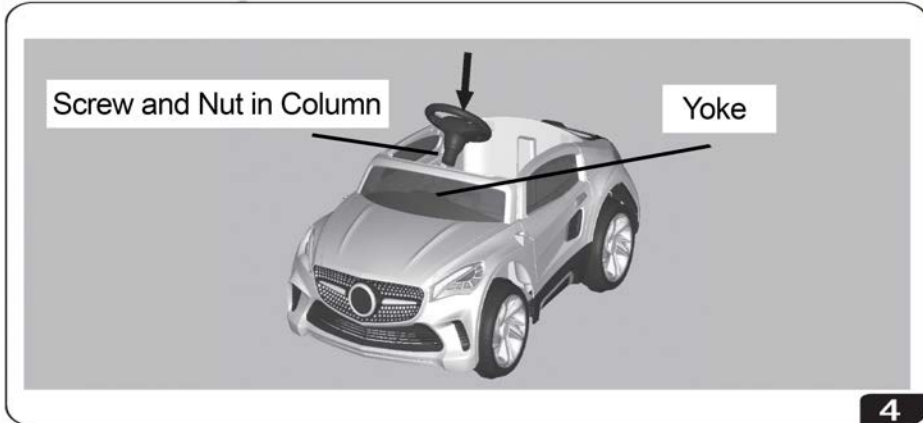


Remove the screw and nut from the column of the steering wheel. Connect the wire terminal on the steering wheel to the wire terminal coming out of the steering yoke on the car body. Connect the steering wheel onto the steering yoke. Align the hole in the column of the steering wheel with the hole on the yoke, and reinsert the screw and nut to secure.

5. Connect The Battery

The battery and connection assembly is located in the area under the seat. Connect the red plug from the wire assembly to the red plug on the battery, and the black plug from the wire assembly to the black plug on the battery. Be sure the connection is secure and snugly fit into place.


(7)

6. Install The Seat & Rearview Mirrors

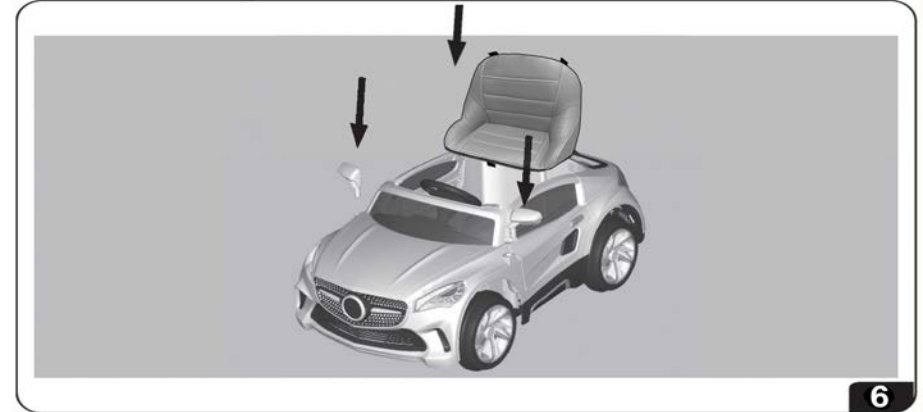

Place the seat latch located on the bottom of the car seat into the groove under the seat on the car body. Lean the chair back and snap the latches on the top back ends of the seat into the grooves on either end behind the seat back. Insert the rearview mirrors into the holes on the car body and secure with screw. (Mirrors may already be installed.)

7. Charge The Battery

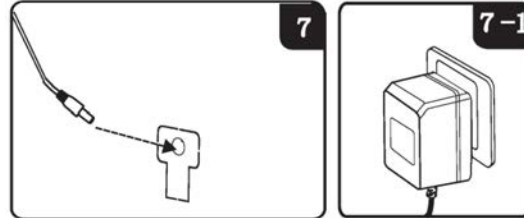

Plug the charger into the charger input located under the passenger side of the seat (Figure 7). Plug the charger into a power outlet (Figure 7-1). **NOTE: The car will not run or power on while charging. CHARGE FOR 18 HOURS ON INITIAL CHARGE.** Charge for 8-12 hours for normal charge. **NEVER charge for more than 20 hours.**

8. Remote Control Operation

Install 2 x AAA batteries (not included) to power the remote control.


Press CAR SELECT to pair remote with the vehicle.

Press the SPEED SELECT button to shuffle through slow, medium and fast speeds. Lights will blink faster or slower to indicate speed setting.



(8)

9. Manual Operation

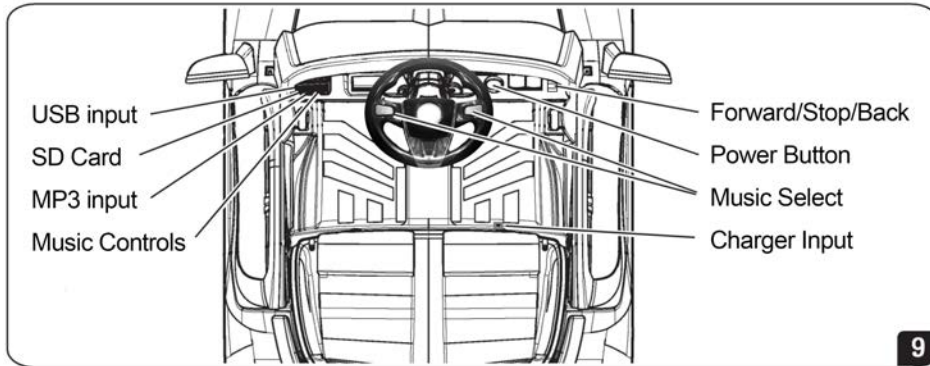


Press the POWER button to start the vehicle. Set the FORWARD/STOP/BACK button to the FORWARD position to drive the car forward. Press the gas pedal to run the vehicle.

When the vehicle is not in motion, click the FORWARD/STOP/BACK button to the BACK position to drive in reverse. **DO NOT toggle the FORWARD/STOP/BACK button while the vehicle is in motion.**

Pressing the MUSIC SELECT and MUSIC CONTROLS buttons will toggle through 8 included preset songs and operate the car horn sound effect.

DECALS

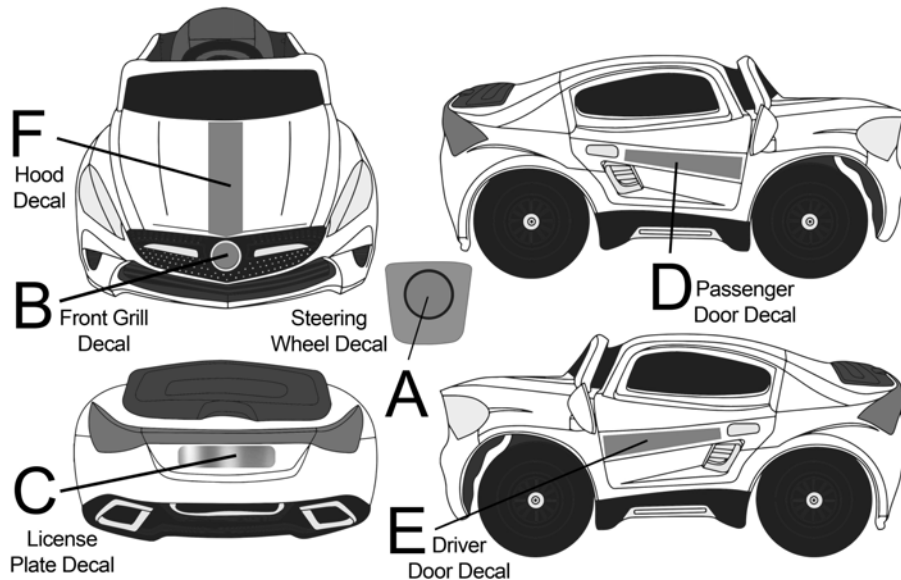

(9)

MAINTENANCE

- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur.
- Do not wash the vehicle with a hose or soap.
- Charge battery at least once a month to prolong the life of the battery.

TROUBLESHOOTING

Issue	Causes	Solution Options
Vehicle does not move.	<ol style="list-style-type: none"> 1. Low Battery 2. Electrical protection to cool battery. 3. Switch not in correct position. 4. The battery is disconnected. 5. Abnormal battery. 6. Electrical damage. 7. Motor failure. 	<ul style="list-style-type: none"> • Charge the battery fully. • Stop for a few minutes to cool battery and restart. • Reconnect battery and switch. • Replace with a new battery. • Contact customer service.
The battery does not recharge.	<ol style="list-style-type: none"> 1. The battery connectors are disconnected. 2. Battery charger is not plugged in. 3. The charger is damaged. 	<ul style="list-style-type: none"> • Reconnect the battery. • Completely plug in charger. • Replace charger.
Battery does not last.	<ol style="list-style-type: none"> 1. Battery does not have a full charge. 2. Battery is out of service life. 	<ul style="list-style-type: none"> • Fully charge the battery. • Replace the battery.
Slight noise and heat during charging process.	<ol style="list-style-type: none"> 1. Normal chemical reactions 	<ul style="list-style-type: none"> • This is normal.
Slow running speed.	<ol style="list-style-type: none"> 1. Battery does not have a full charge. 2. Battery is out of service life. 3. Overloaded vehicle. 4. Uneven or sloped surface. 	<ul style="list-style-type: none"> • Fully charge the battery. • Replace the battery. • Reduce weight to 80 lbs or less. • Operate on flat ground.
Gearbox noise.	<ol style="list-style-type: none"> 1. Gear damage 	<ul style="list-style-type: none"> • Contact customer service.
Vehicle shakes while driving.	<ol style="list-style-type: none"> 1. Poor contact of motor cable. 2. Short-circuited motor. 	<ul style="list-style-type: none"> • Reconnect the motor cable. • Contact customer service.
Vehicle audio does not work.	<ol style="list-style-type: none"> 1. Steering wheel connector is not plugged properly. 	<ul style="list-style-type: none"> • Reconnect in accordance with the manual.
The car will not stop.	<ol style="list-style-type: none"> 1. Electrical damage. 	<ul style="list-style-type: none"> • Contact customer service.

This vehicle is Made in Indonesia

AGES 3+

Big Team Ride Ons: The Ultimate Sports Car is a registered trademark of Party Animal, Inc.

For any questions please call Party Animal, Inc. at **1-800-456-0145** to speak with our customer service department. Visit www.partyanimalinc.com for more information. (10)